


CROSS-SECTIONAL VIEW OF WHEEL & TIRE

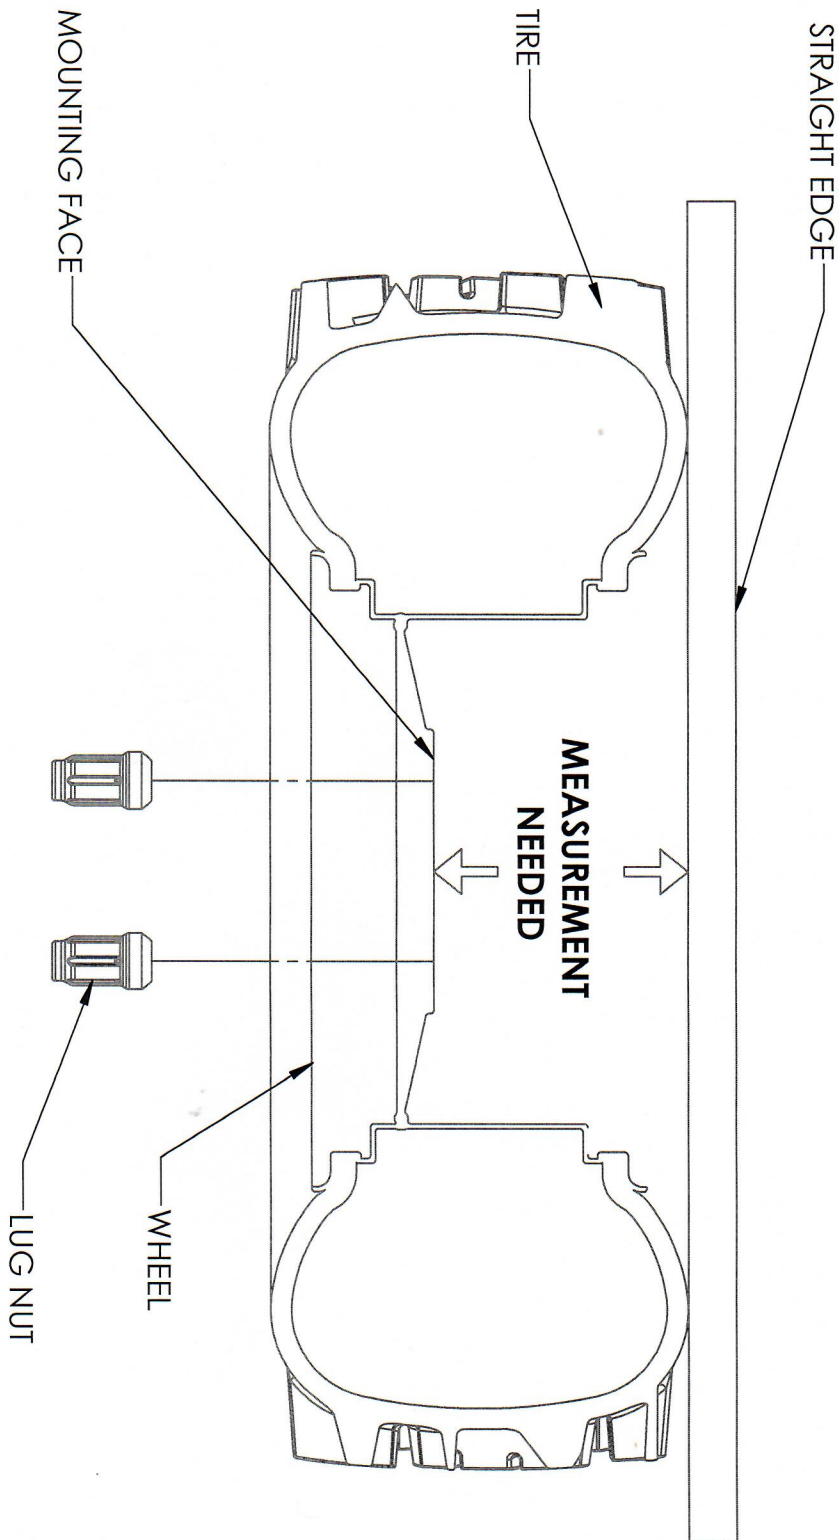

DIRECTIONS TO FIND NEEDED MEASUREMENT:

1. LAY STRAIGHT EDGE ACROSS TIRE
2. MEASURE DOWN FROM STRAIGHT EDGE TO MOUNTING FACE