

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730


E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



Polaris RZR XP 4 1000 Rock Slider Instruction Guide

Ultra. High. Molecular. Weight. polyethylene all terrain Rock Slider protection

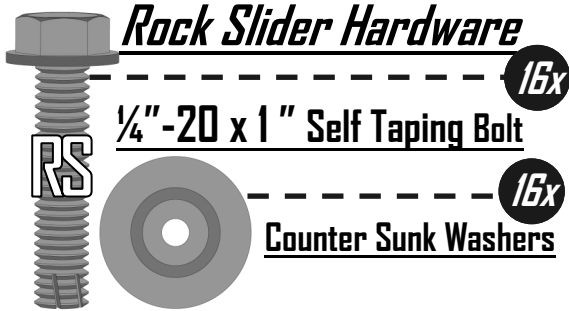

Rock Slider Hardware

15x
1/4" -20 x 1" Self Taping Bolt

16x
Counter Sunk Washers

Rock Slider Instructions


**(see drilling instructions) *Drill at (A) locations, in center of "T" connection in tube chassis frame. Align with second mounting hole in front rock slider. Use Rock Slider as a guide to mark the remaining holes.*

*Ensure each mounting hole is drilled in to the center of the "Round" chassis tube frame
Install: (10x) 1/4" -20 x 1/4" Self Tapping Bolts with Counter Sunk Washers in front Rock sliders*


**Fasten Front Rocksliders
Before Drilling for Rear Rocksliders**
(front & rear Rock sliders butt together when fastened)

*Referencing stock bolts in (B) locations, using a straight edge, mark and *drill mounting holes. Align with second mounting hole in rear rock slider, Use Rock Slider as a guide to mark the remaining holes.*

*Ensure each mounting hole is drilled in to the center of the "Round" chassis tubing.
Install: (6x) 1/4" -20 x 1/4" Self Tapping Bolts with Counter Sunk Washers in rear Rock sliders*

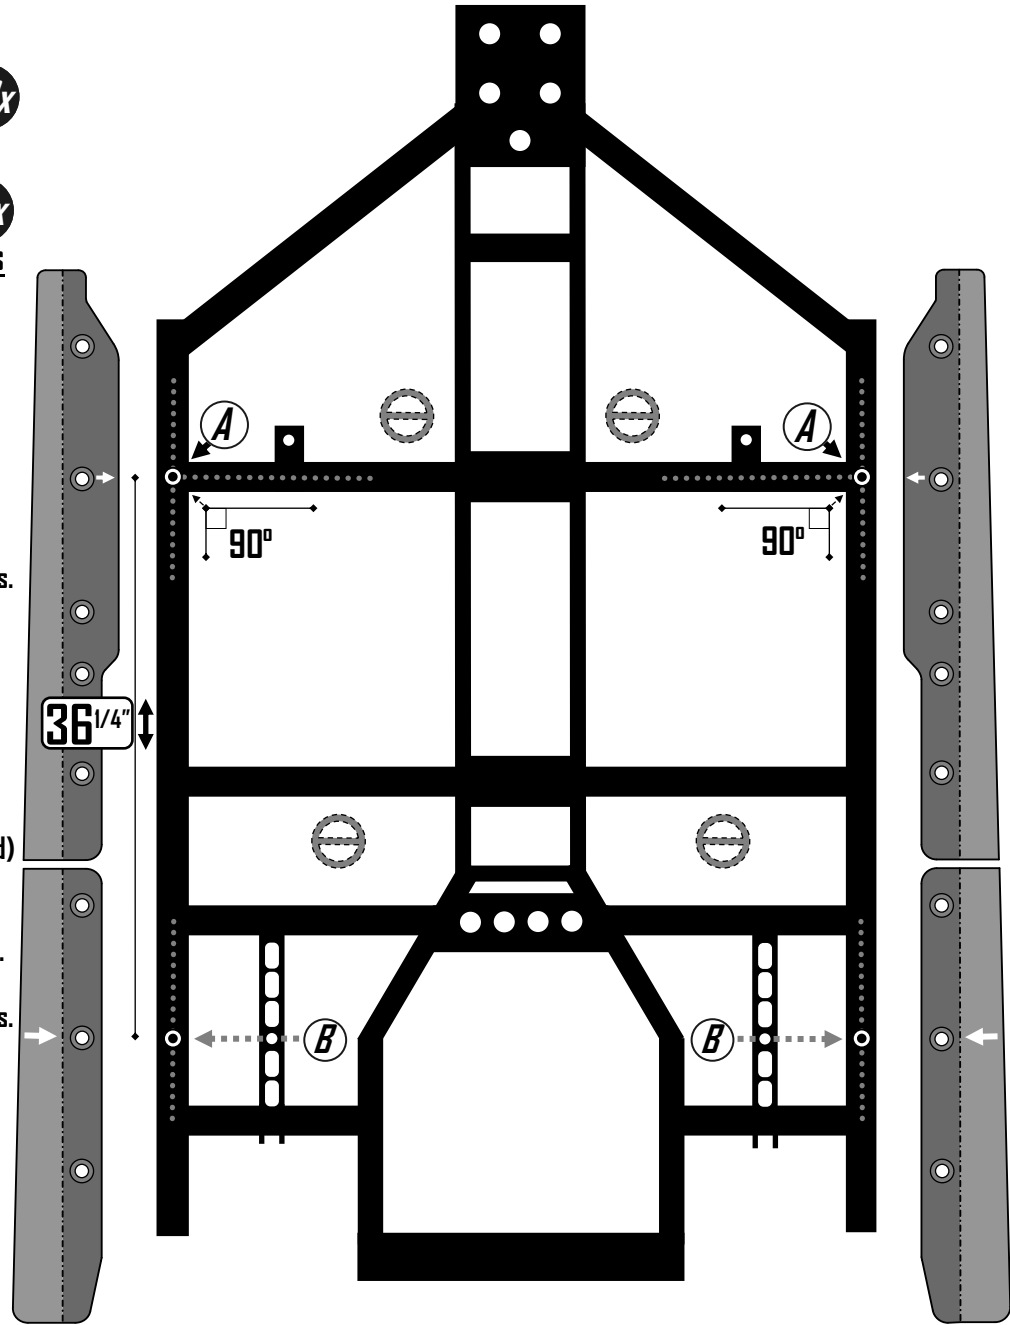

Ensure each mounting hole is drilled in to the center of the "Round" chassis tubing.

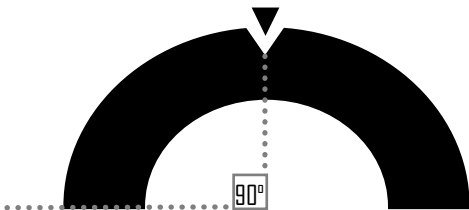

*Drilling Instructions

Use a : #No7 (13/64th) drill bit,

(One size above the commonly available 3/16th bit) Recommended 1/4" - 20 Tap *(Optional)

To drill and thread self tapping bolts in to chassis frame.

Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We strongly recommend the use of a "Thread Locking Compound"

Ensure all Bolts are fastened securely when complete.