

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



Polaris RZR XP 1000 / Turbo S Rock Slider Instruction Guide

Ultra. High. Molecular. Weight. polyethylene all terrain Rock Slider protection

Rock Slider Hardware



8x

1/4" -20 x 1" Self Taping Bolt

8x

Counter Sunk Washers

Rock Slider Instructions

**(see drilling instructions) *Drill at (A) locations, in center of "T" connection in tube chassis frame.*


*Referencing stock bolts in (B) locations, using a straight edge, mark and *drill mounting holes.*

*Align with center 2x mounting holes in rock slider, use as a guide to mark and *drill the remaining holes.*


Ensure each mounting hole is drilled in to the center of the "Round" chassis tube frame.

Install: (8x) 1/4"-20 x 1" Self Tapping Bolts with Counter Sunk Washers in Rock sliders

{ if reference holes are not present, center rock slider for best fit, mark and drill, and install if alignment is off, it may cause minor complications with future skid plate install. }

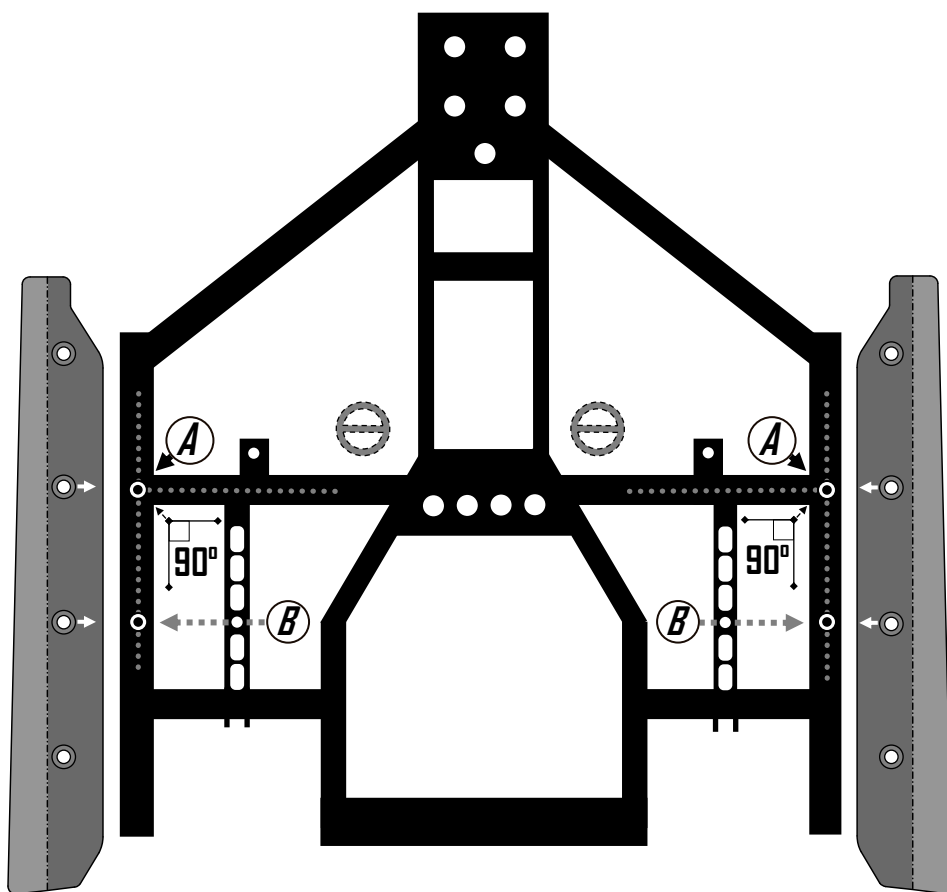

Ensure each mounting hole is drilled in to the center of the "Round" chassis tubing.

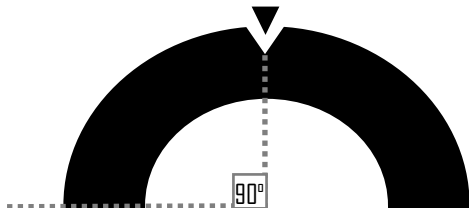

*Drilling Instructions

Use a : #No7 (13/64th) drill bit,

(One size above the commonly available 3/16th bit) Recommended 1/4" - 20 Tap * (Optional)

To drill and thread self tapping bolts in to chassis frame.

Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We strongly recommend the use of a "Thread Locking Compound"

Ensure all Bolts are fastened securely when complete.