

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730


E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



Polaris RZR XP 1000 Trailing-Arm Instruction Guide

Ultra. High. Molecular. Weight. polyethylene all terrain Trailing-Arm guard protection

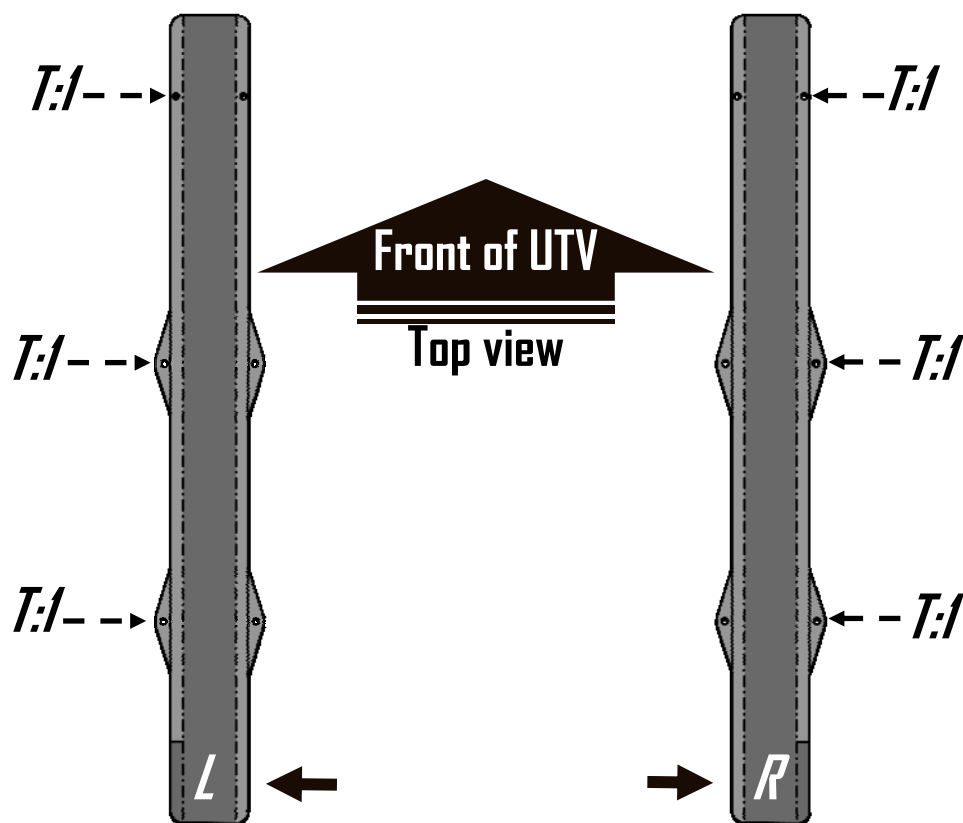

Trailing Arm Guard instructions

Mount in place and align to best fit,
before fastening all bolts securely

(We strongly recommend the use of a "Thread Locking Compound")

Install: (1x) 1/4" x 20 x 3" Hex Bolt with
(2x) 1/4" Zinc Washers, *(on each side of the bolt)
and fasten (1x) 1/4" x 20 Ny-Lock Nut
at Each: (T:1) location.

Trailing-Arm Hardware

