

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730



E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



Polaris RZR RSI (2018+) A-Arm Instruction Guide

Ultra. High. Molecular. Weight. polyethylene all terrain A-Arm guard protection

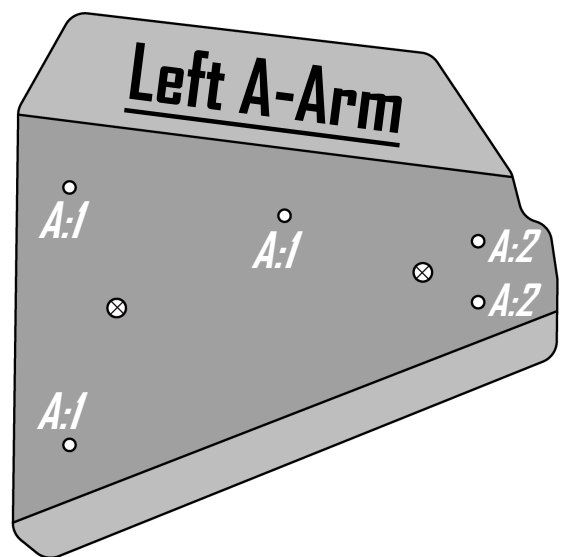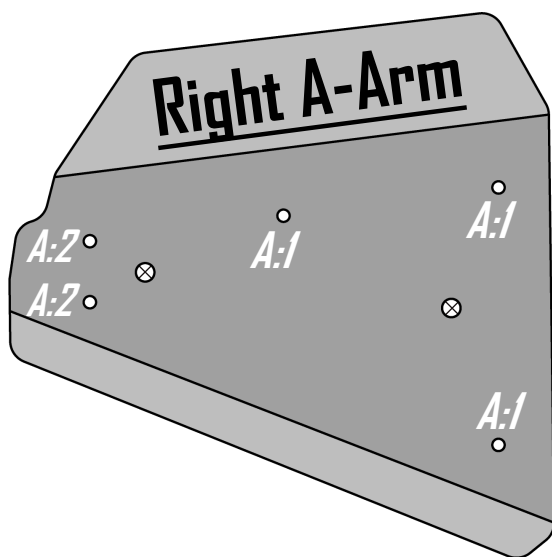


⊗ = Drainage Holes
Do Not Use For Mounting

A-Arm Guard Installation Instructions

Install: (3x) "D" clamps over A-Arm tubing on each A-Arm with:
(3x) 1/4"-20 x 1 1/4" Counter Sunk Bolts, (3x) 1/4" Gold Washers,
and (3x) 1/4"-20 Ny-Lock Nuts in: (A:1) locations.

Install: (2x) 1/4"-20 x 1 1/2" Counter Sunk Bolts, with
(2x) 1/4" Gold Washers, and 1/4"-20 Ny-Lock Nuts through
mounting holes at the apex of A-Arm in: (A:2) locations.

*Ensure Clearance For Turn Radius &
Vertical Travel Before Fastening ALL Bolts Securely.
(We strongly recommend the use of a "Thread Locking Compound"
when installing any mounting hardware.)

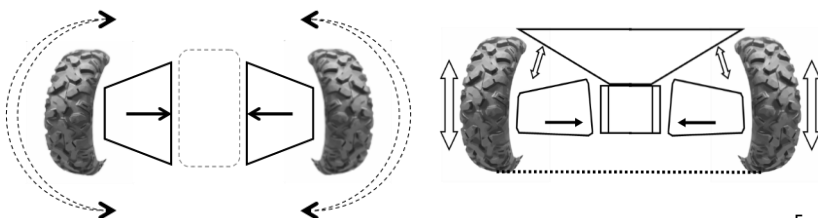

A-Arm Hardware

