
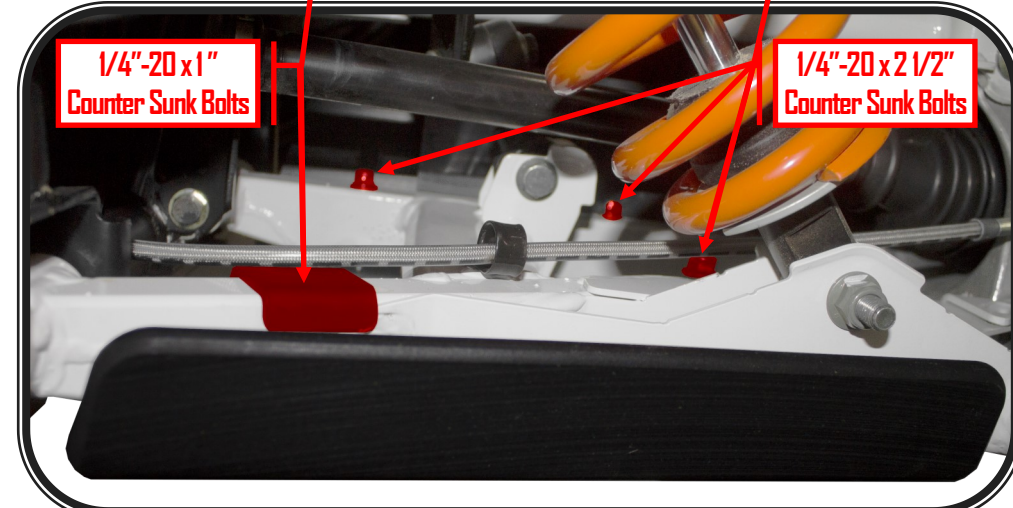
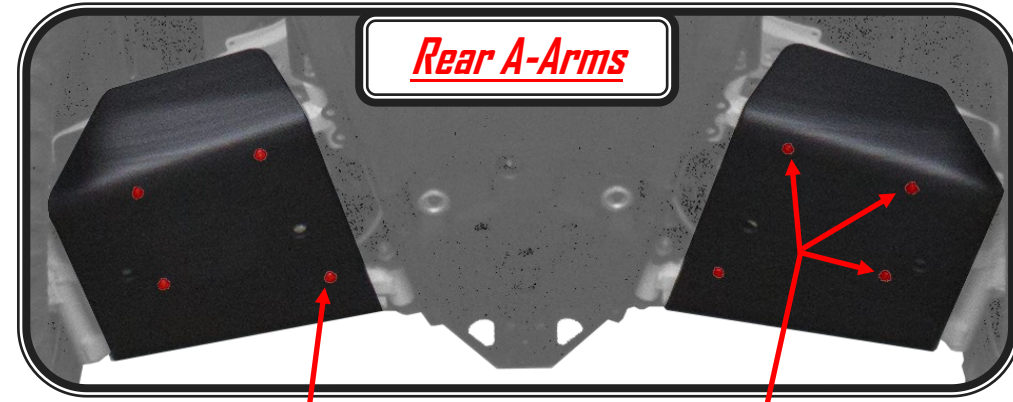
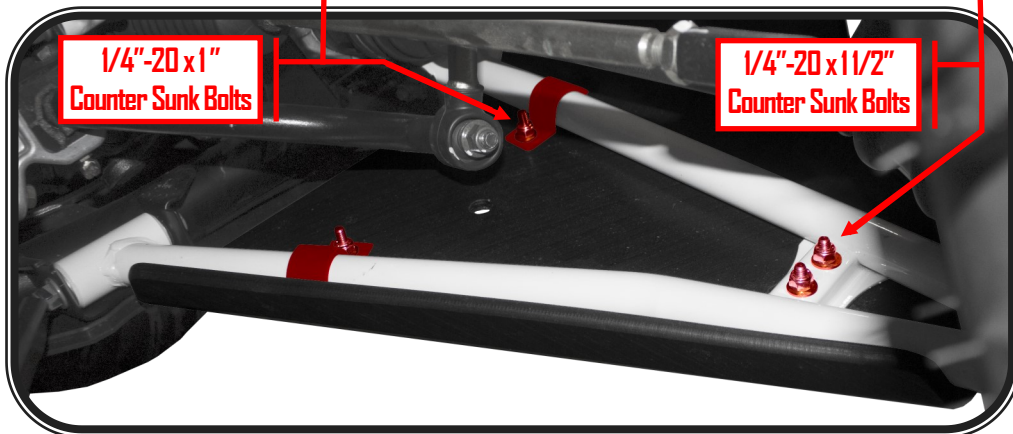


Polaris A-Arm Guard Instructions

RZR 900s & General 1000 EPS

Note:
Direction of
A-Arms &
clamps

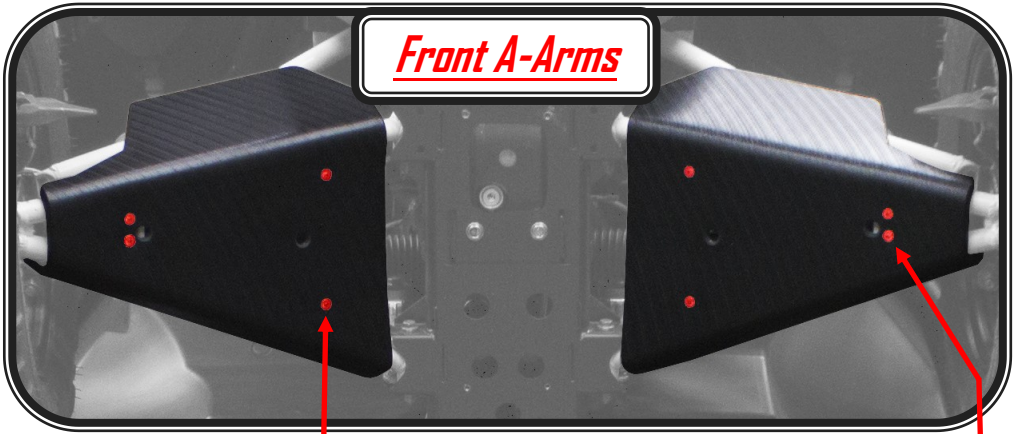

- Front A-Arm Hardware**
- (4x) 1" x 1" D Clamps
 - (4x) 1/4"-20 x 1" Counter Sunk Bolts
 - (4x) 1/4"-20 x 1 1/2" Counter Sunk Bolts
 - (8x) Ny-Lock Nuts
 - (8x) 1/4" Gold Washers

(Front A-Arm Guards)

Install : A-Arm guard,
 Hold in place Align & install

Use: 1" x 1" "D" Clamps with/
 1/4" - 20 x 1" Counter Sunk Bolts ,
 1/4" Gold Washers and Ny-Lock Nuts.

On the outer apex of the a-arm use :
 1/4"-20 x 1 1/2" Counter Sunk Bolts
 1/4" Gold Washers and Ny-Lock Nuts
 finger tighten bolts to allow adjustment
 Tighten all bolts securely when done

(Rear A-Arm Guards)

(using similar method)

Install Rear A-Arm Guards, Use:
 1 1/2" x 1 1/4" "Box" Clamps with/
 1/4" - 20 x 1" Counter Sunk Bolts
 1/4" Gold Washers & Ny-Lock Nuts

And install
 1/4"-20 x 2 1/2" Counter Sunk Bolts

In the other 6x bolt locations.
 Finger tighten bolts to allow for adjustment.
 Tighten all bolts securely when done

- Rear A-Arm Hardware**
- (2x) 1 1/2" x 1 1/4" Box Clamps
 - (2x) 1/4"-20 x 1" Counter Sunk Bolt
 - (6x) 1/4"-20 x 2 1/2" Counter Sunk Bolts
 - (8x) Ny-Lock Nuts
 - (8x) 1/4" Gold Washers