

Contact Us: *FACTORY UTV LLC*

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



Standalone U.H.M.W. Rock Slider Instructions

Ultra. High. Molecular. Weight. polyethylene all terrain skid plate / under armor kit for UTV's

Installation Guide

Can-Am Maverick Trail

(2018+)



Can-Am Maverick Trail (2018) Instructions

#1

Rock Sliders :


Carefully Drill out rivets as needed for Rock Sliders in (A*) locations,

Use: (8x) $\frac{1}{4}$ "-20 x 1" Self Tapping Bolts in Main Skid: (A*) locations.

Use: (2x) M6- 1.0 x 30mm Flange Bolt in Main Skid: (B) locations.

Use: (2x) M6- 1.0 x 40mm Flange Bolt in Main Skid: (C) locations.

Hold
Rock sliders in place
mark mounting holes and
*Drill out rivets as needed.
Re-use mounting holes.
See drilling instructions
prior to drilling.

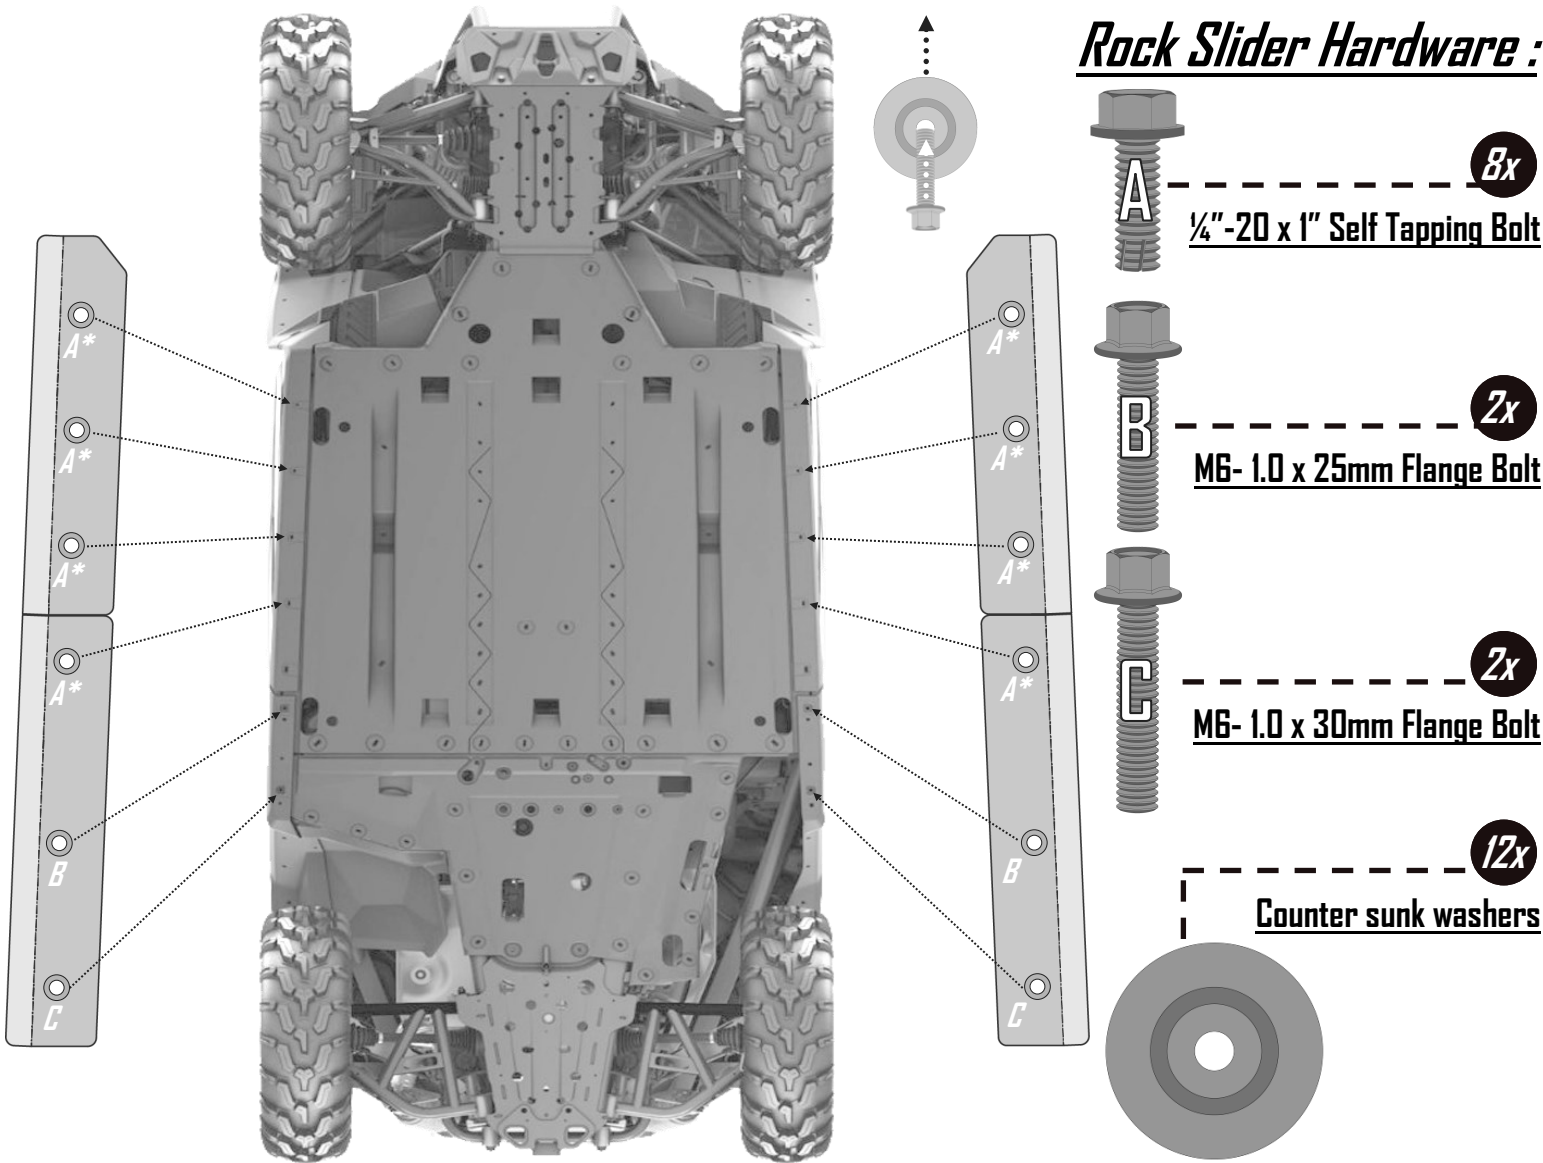

Rock Slider Hardware :

8x
A
 $\frac{1}{4}$ "-20 x 1" Self Tapping Bolt

2x
B
M6- 1.0 x 25mm Flange Bolt

2x
C
M6- 1.0 x 30mm Flange Bolt

12x
Counter sunk washers

*Drilling Instructions : *

Use a : #No7 (13/64th) drill bit.

(one size above the commonly available 3/16th bit) Recommend the use of : $\frac{1}{4}$ "- 20 Tap *(Optional)

To drill and thread self tapping bolts in to chassis frame.

Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We strongly recommend the use of a 'Thread Locking Compound' when installing any mounting hardware.

(When installation is complete , ensure all bolts are fastened securely.)