

# Honda A-Arm Guard Instructions

## Pioneer 1000 / 1000-5 (2016)

**Note:**  
Direction of  
A-Arms &  
Spacers




**Front A-Arm Hardware**  
(8x) 1" x 1" D Clamps  
(8x) Ny-Lock Nuts  
(8x) 1/4" Gold Washers  
(8x) 1/4"-20" x 1"  
Counter Sunk Bolts

**Rear A-Arm Hardware**  
(8x) 1" x 1" Box Clamps  
(8x) Ny-Lock Nuts  
(8x) 1/4" Gold Washers  
(8x) 1/4"-20" x 1"  
Counter Sunk Bolts

### Front A-Arms

**( Front A-Arm Guards )**  
Install : A-Arm guard,  
Hold in place Align & install  
Use: 1" x 1" - "D" Clamps with/  
1/4" - 20 x 1" counter sunk bolts  
1/4" Gold Washers & Ny-Lock Nuts  
finger tighten bolts to allow adjustment.  
Tighten all bolts securely when done

**( Rear A-Arm Guards )**  
(using similar method)  
Install : Rear A-Arm Guards  
Use: 1" x 1" "Box" Clamps with/  
1/4" - 20 x 1" counter sunk bolts  
1/4" Gold Washers & Ny-Lock Nuts  
finger tighten bolts to allow adjustment.  
Tighten all bolts securely when done

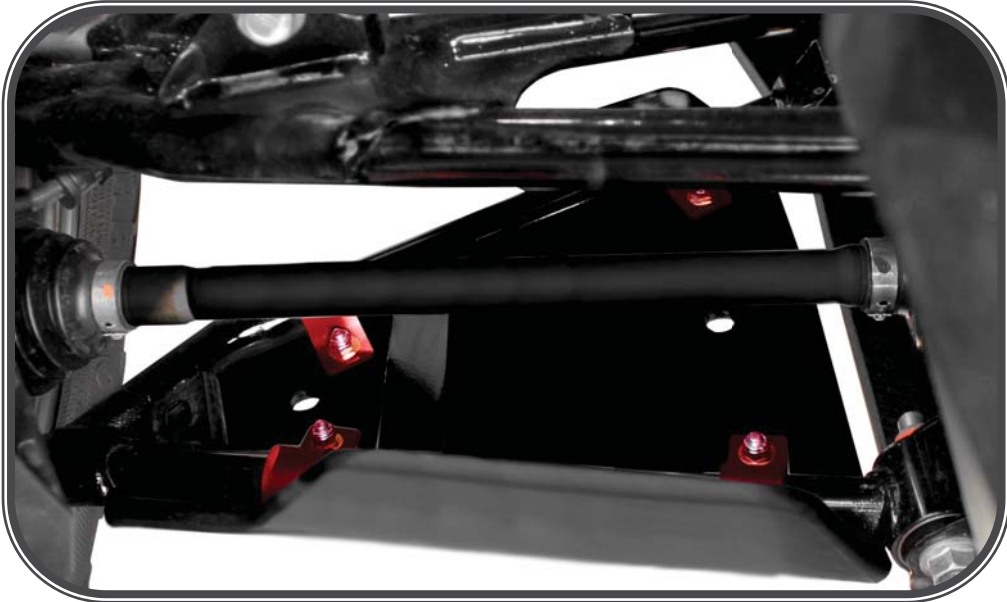

### Rear A-Arms

