


Polaris RZR Pro XP (2020 - 2021+) A-Arm Guard Installation



A-Arm Guards (repeat for each side)

Install with: (5x) 1"x1" "D" Clamps over A-Arm tubing with (5x) ¼"-20 x 1¼" Counter Sunk Bolts, (5x) ¼" Gold Washers, and (5x) ¼"-20 Ny-Lock Nuts, For Each A-Arm (A:1) location. Hold guard in place, reach over a arm and fasten D clamps over tubing, fasten each bolt loosely to allow for adjustments, once positioned, fasten bolts in pattern until bolt heads are snug and flush, do not pull bolts through plastic.


Do not over tighten.

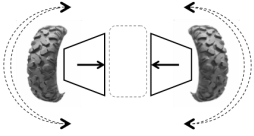


***Ensure** Clearance For Turn Radius & Vertical Travel before first use

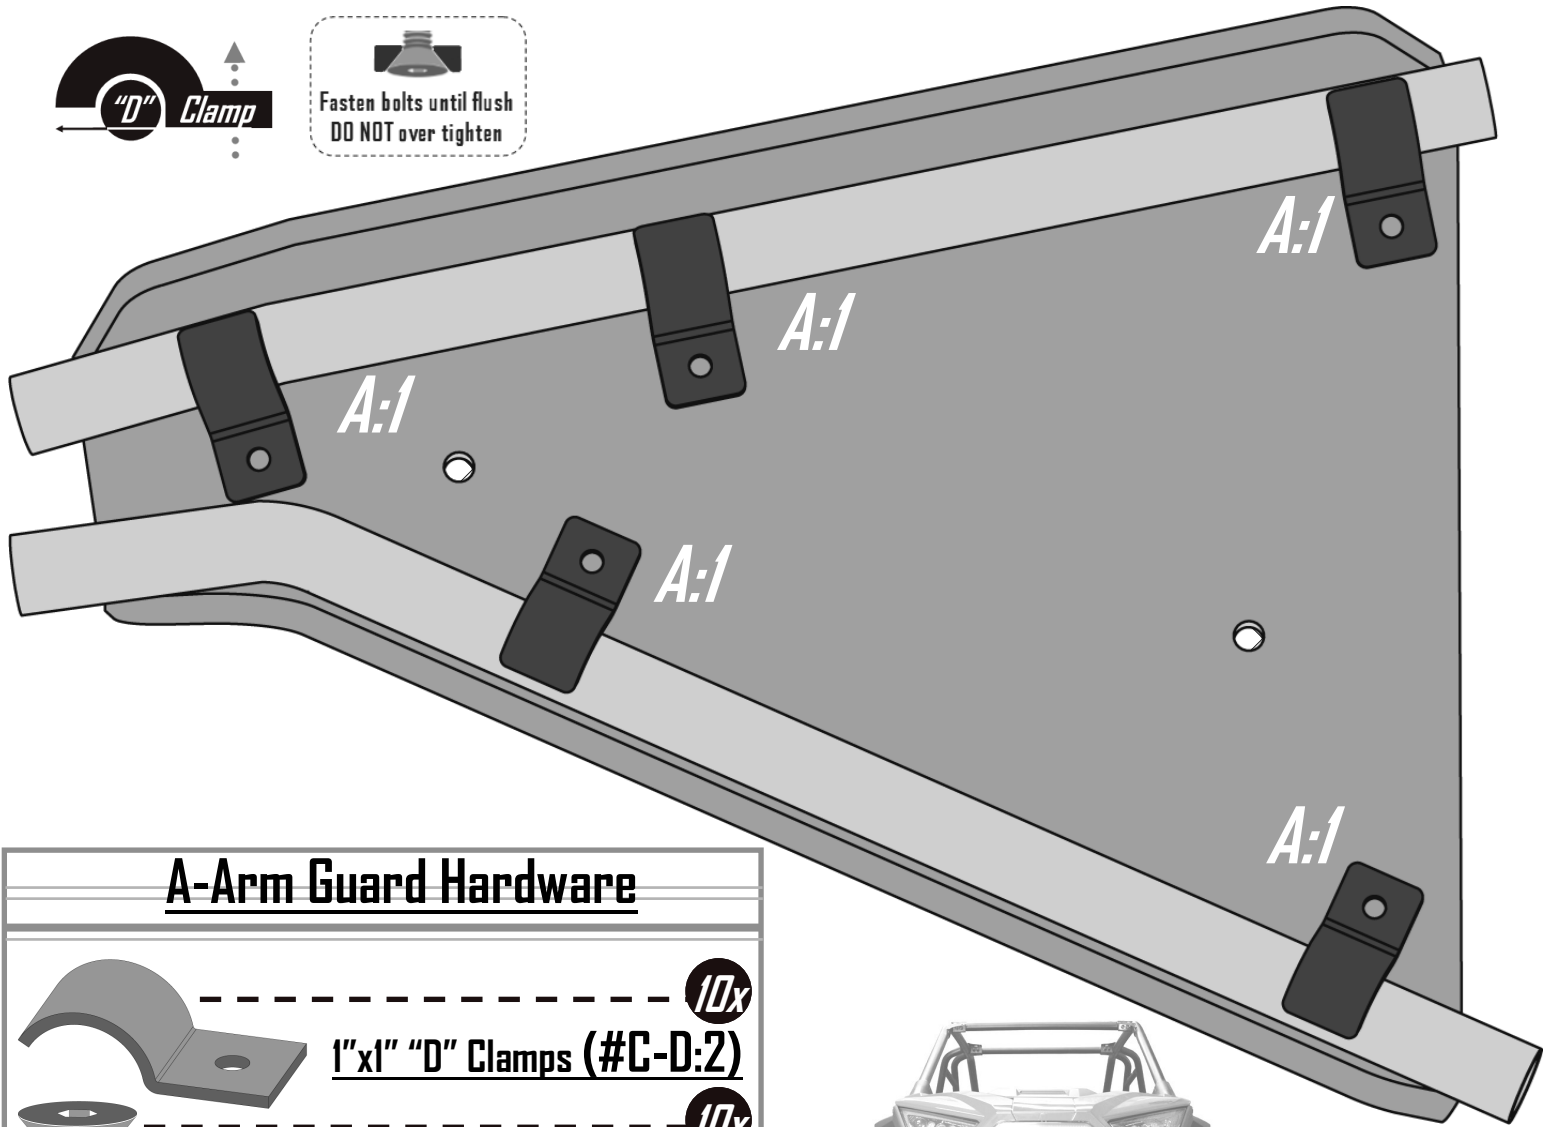

A-Arm Guard Hardware

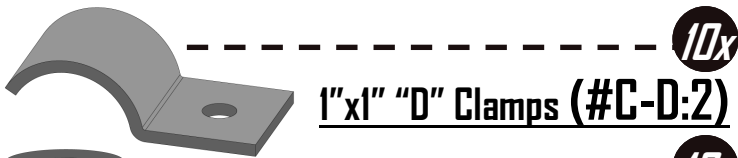

1"x1" "D" Clamps (#C-D:2) **10x**

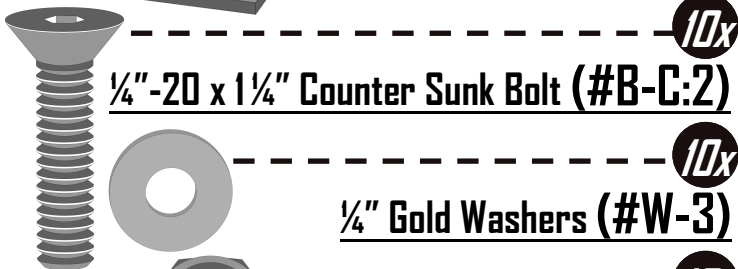


¼"-20 x 1¼" Counter Sunk Bolt (#B-C:2) **10x**



¼" Gold Washers (#W-3) **10x**



¼"-20 Ny-Lock Nut (#N-2) **10x**

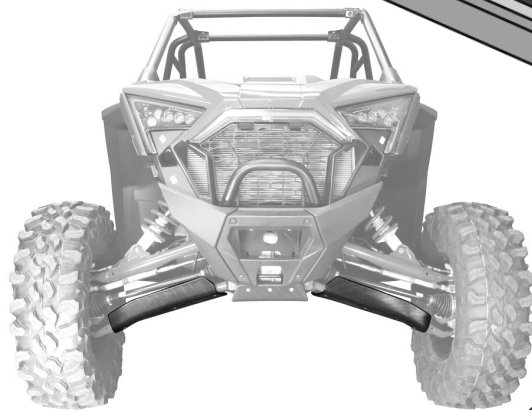

⊗ = Drainage Holes
Do Not Use For Mounting