

Contact Us: *FACTORY UTV LLC*

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



U.H.M.W. Skid Plate / Under Armor Package

Ultra. High. Molecular. Weight. polyethylene all terrain skid plate / under armor kit for UTV's

Installation Guide (RockSliders)


Polaris

Ranger XP 1000 Crew (2018 - 2021+)




Polaris Ranger XP 1000 Crew (2018 - 2021+)

Rockslider Installation

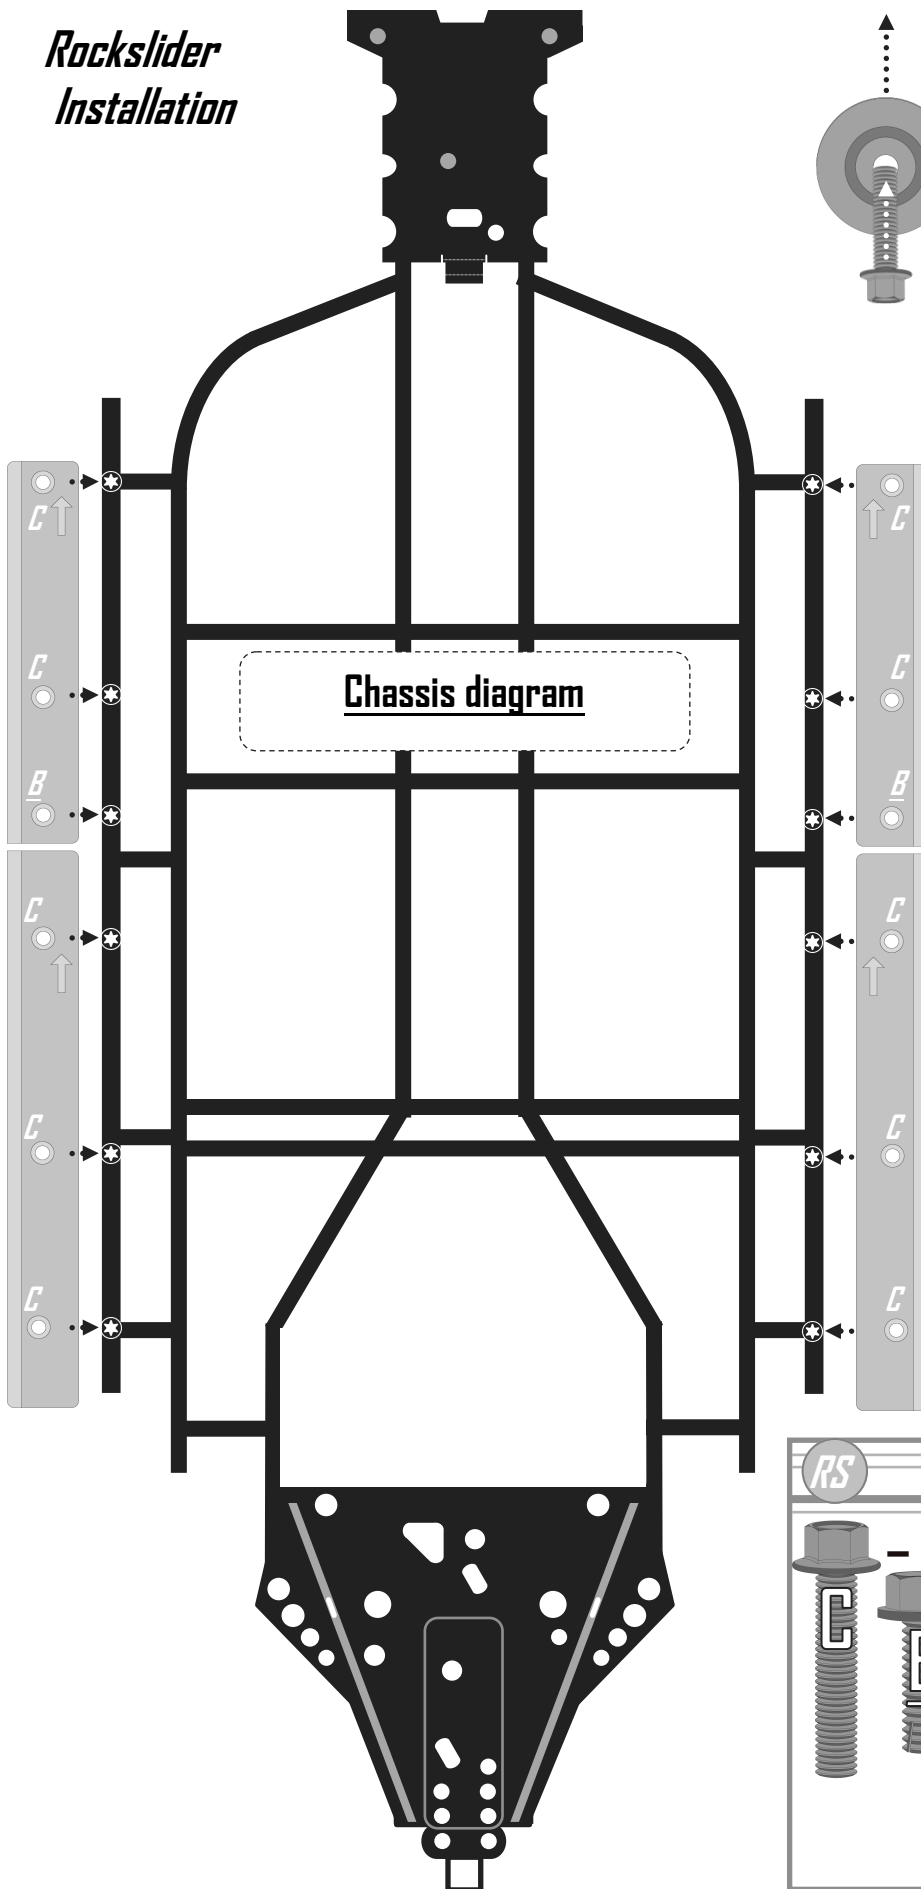

Drilling is Required
 Use a : #No7 (13/64th) drill bit,
 (one size above the commonly available 3/16th bit)
 Recommended use of 1/4" - 20 Tap *(Optional)
 To drill and thread self tapping bolts
 in to chassis frame.

- 1 **Remove:** (10x) T-40 Torx Bolts on each lower side panel.
- 2 **Place Rocksliders** along vehicael edge, Install: (10x) **M6- 1.0 x 25mm Flange Bolts** with (10x) **Counter sunk washers** in all (C) locations.
- 3 **With rocksliders in place,** mark and drill (B) Locations. Install (2x) **1/4"-20 x 1" Self Taping Bolts,** With counter sunk washers in (B) locations.

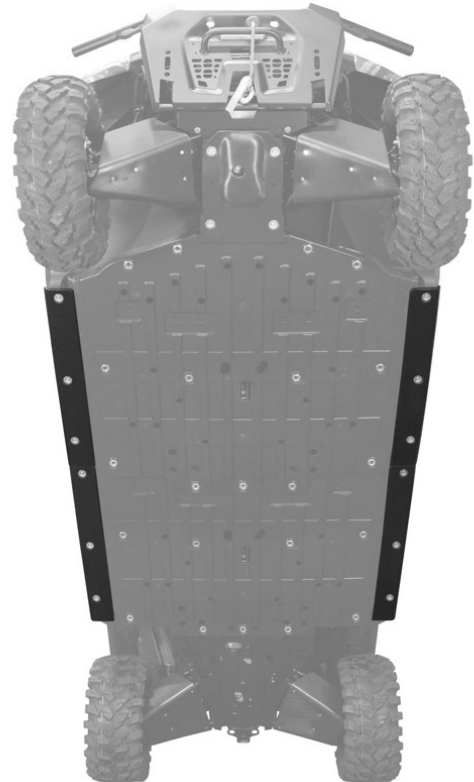

Rock slider Hardware :	
	10x M6- 1.0 x 25mm Flange Bolt (#B-A:6)
	2x 1/4"-20 x 1" Self Taping Bolt (#B-D:3)
	12x Counter Sunk Washers (#W-1)