

Contact Us: **FACTORY UTV LLC**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



U.H.M.W. A-Arm Guards / Under Armor Package

Ultra. High. Molecular. Weight. polyethylene all terrain skid plate / under armor kit for UTV's



Installation Guide (A-Arm Guards)

Kawasaki

Teryx KRX 1000 (2020+)







Kawasaki Teryx KRX 1000 (2020+) UHMW A-Arm Guards

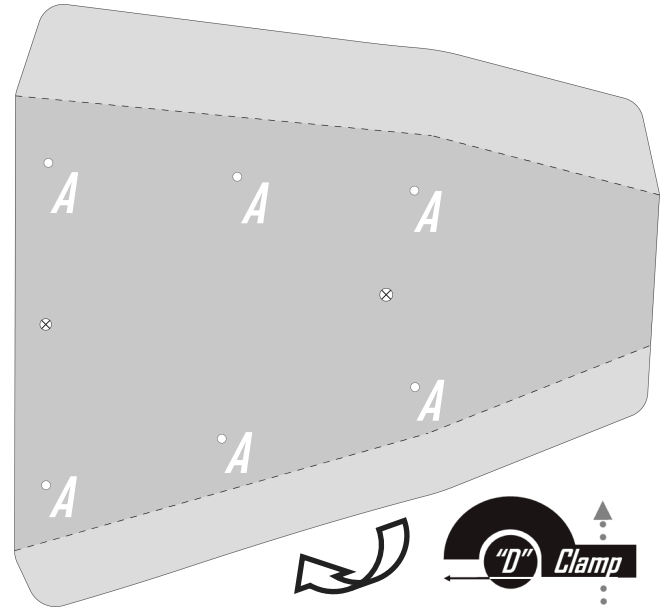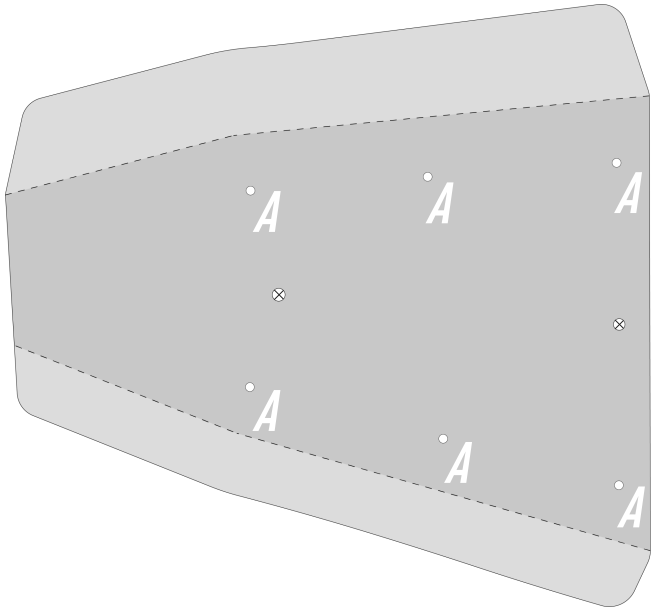

A-Arm Guard Installation:

Holding A-arm Guards in place, Install (12x) 1 x 1/4" "D" Clamps, Over A-arm Tubing with (12x) 1/4"-20 x 1 1/4" Counter Sunk Bolts, (12x) 1/4" sm Gold Washers, and (12x) 1/4"-20 Ny-Lock Nuts in (A) locations. Install bolts loosely for adjustment, using an 5/32" Allen Wrench, and 7/16" wrench or socket, Fasten Until Flush with UHMW. Do Not Over tighten Counter sunk Bolts.

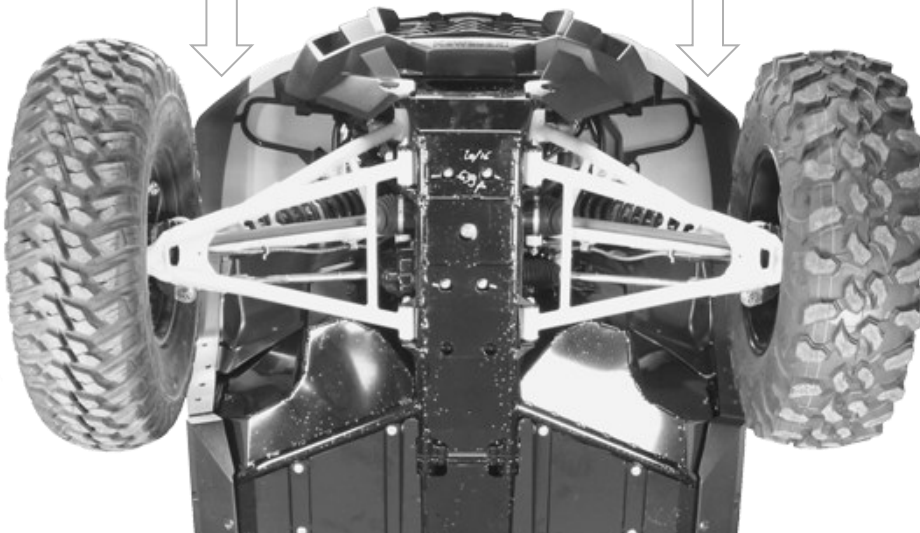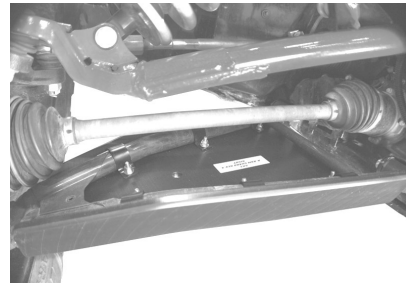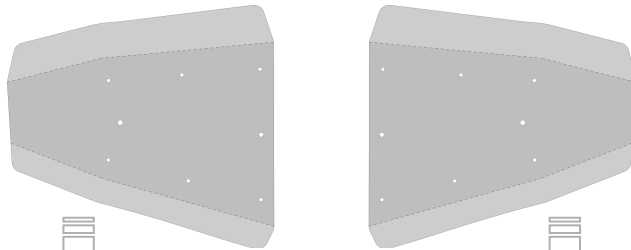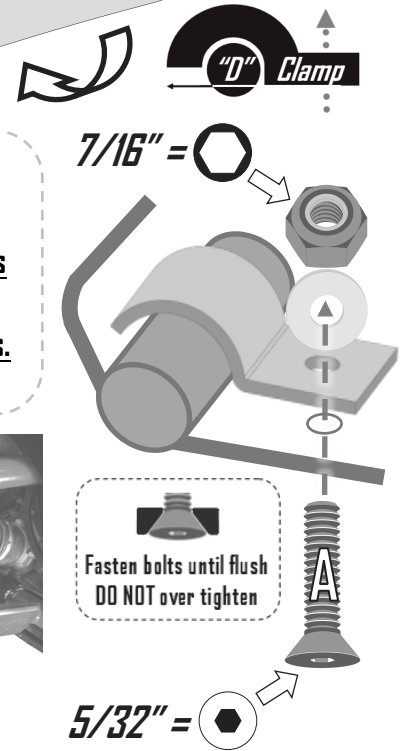

#1 Front A-arm Guard Hardware	
	1/4"-20 Ny-Lock Nut (#N-2) 12x
	1/4" sm Gold Washers (#W-3.0) 12x
	1" x 1/4" "D" Clamps (#C-D:3) 12x
	1/4"-20 x 1 1/4" Counter Sunk Bolts (#B-C:2) 12x